



# Disassembling Nokia E71 Complete disassembly

Written By: Jose Gustavo Abreu Murta





## TOOLS:

- [T6 Torx Screwdriver](#) (1)
  - [T5 Torx Screwdriver](#) (1)
  - [iSesamo Opening Tool](#) (1)
  - [Spudger](#) (1)
-



## Step 1 — Disassembling Nokia E71 Complete disassembly





- First remove back cover, battery, chip and memory card .

## Step 2



- Remove 4 Torx T5 screws.

## Step 3

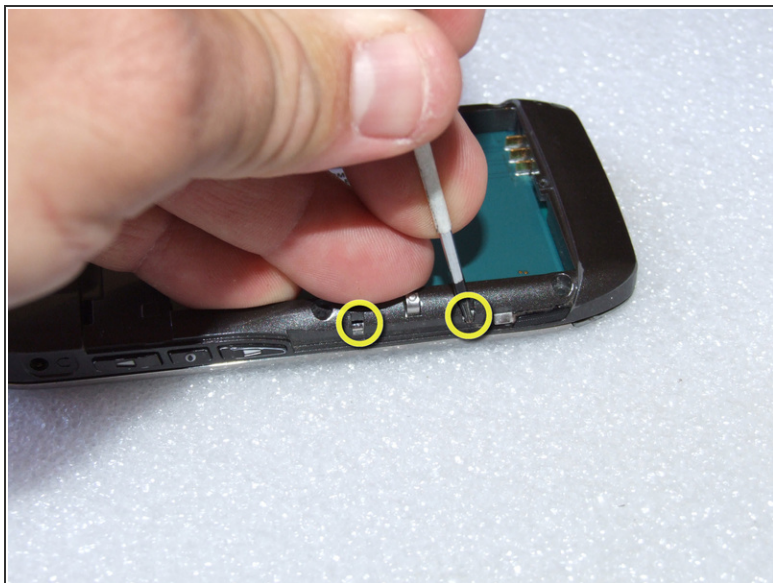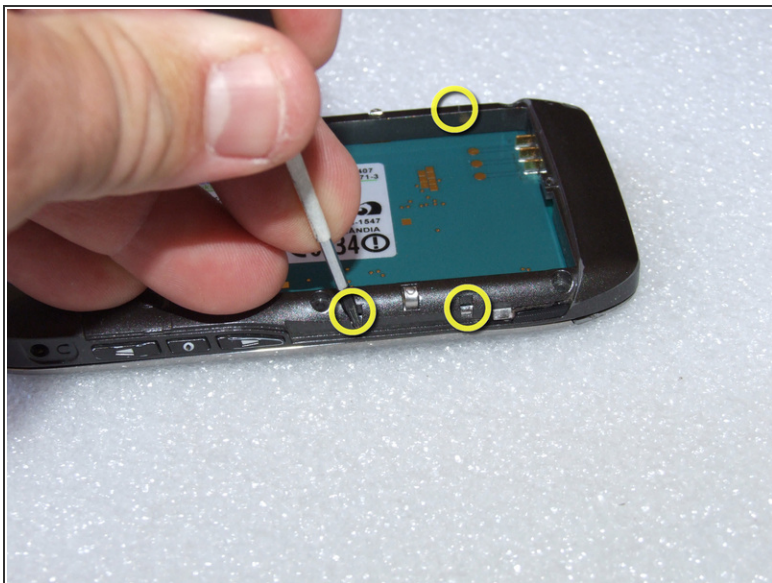

- Press these four latches (each side has two) to open front cover.

## Step 4



- Carefully remove the front cover with blade tool.



## Step 5





- Carefully remove the bottom cover. This cover has no screws, only latches.

## Step 6



- Front cover, rubber keyboard and bottom cover removed.

## Step 7

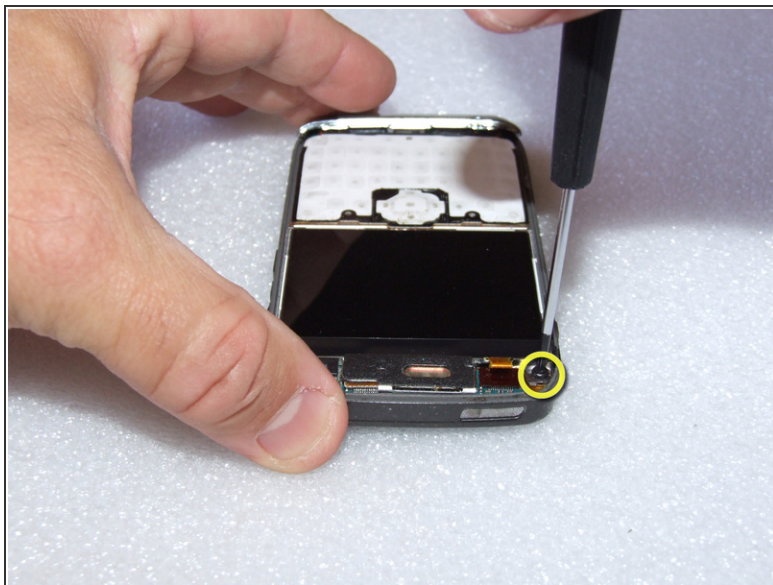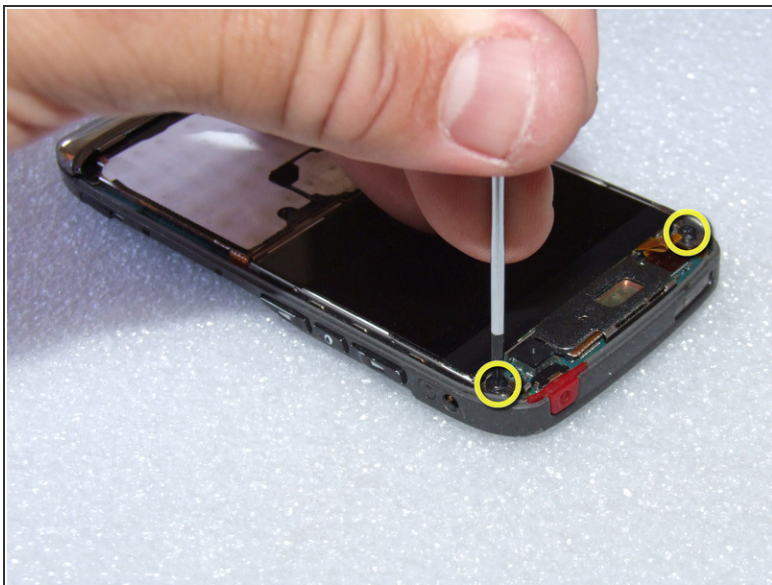

- Remove these two Torx T6 screws at top of the smartphone.


## Step 8



- Carefully remove the assembly. Dont forget to move away the plastic clip holding the assembly down. You can find this in the center on the bottom.



## Step 9

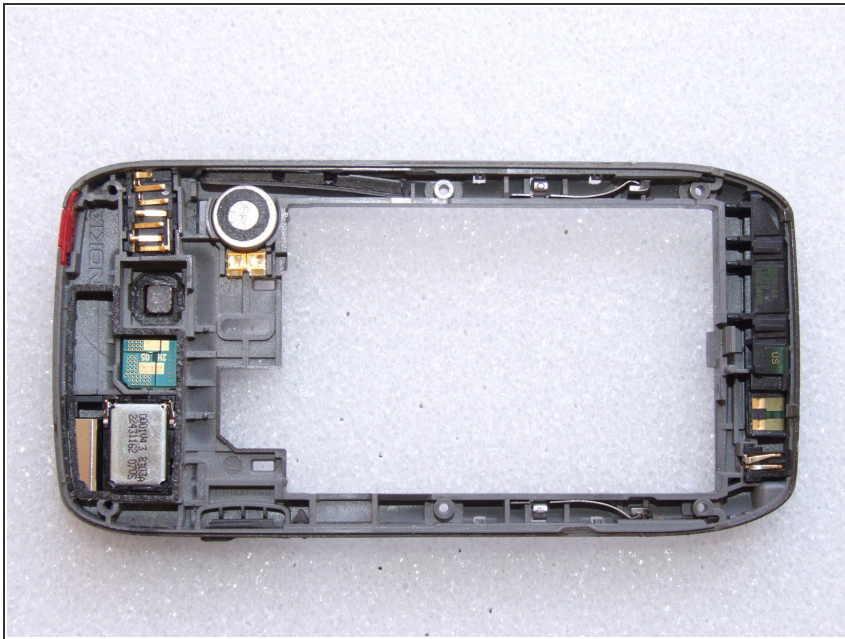


- Base assembly with small connectors and parts.

## Step 10





- Remove the LCD connector.

## Step 11

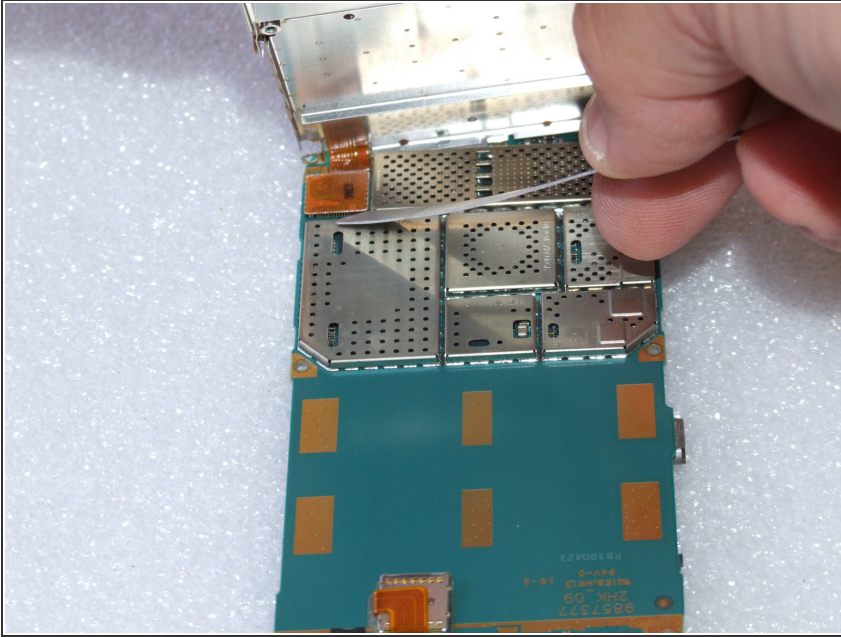

- Carefully open the LCD and keyboard assembly, and remove keyboard connector.

## Step 12

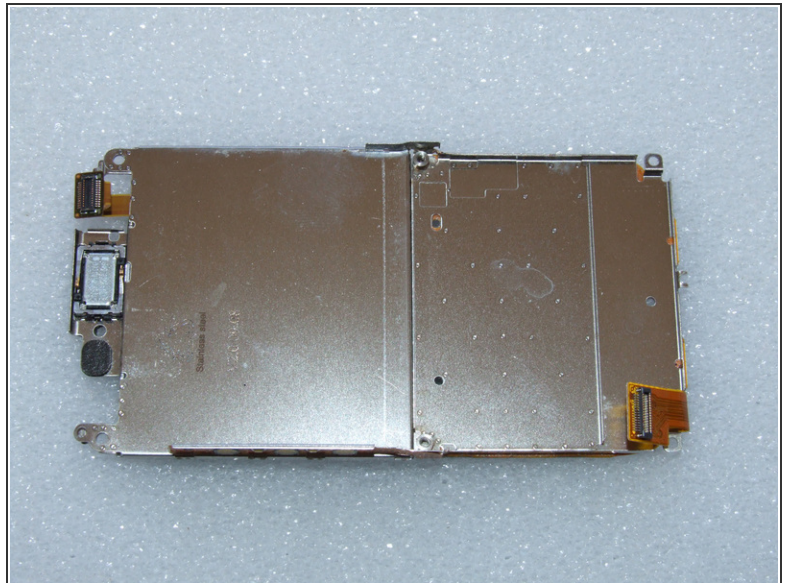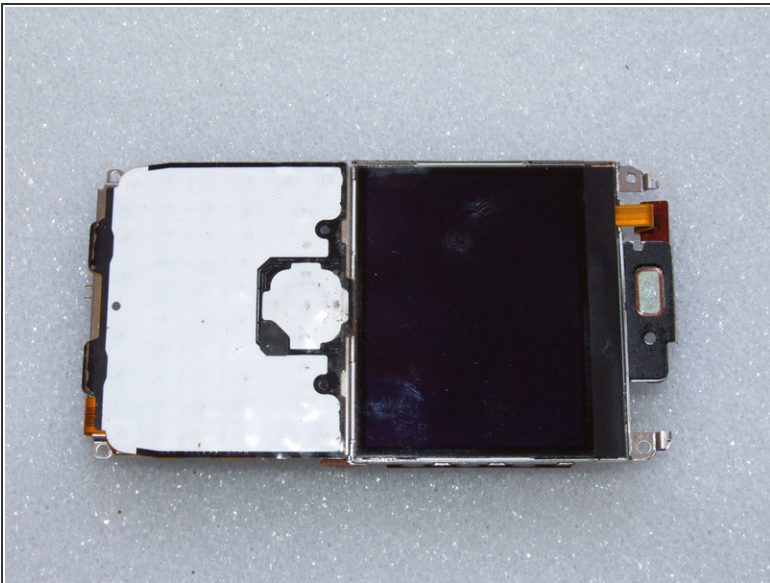

- Both sides of the LCD and keyboard assembly removed.



## Step 13



- I think that two small blocks are the gps antenna.

## Step 14



- Both sides of battery - for reference only.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-30 06:32:13 AM.

